

BIOS Firmware Update Step

***Before BIOS update process, you have to power off system first**

1. BIOS update through yafuflash


1.1. Use the "Yafuflash" utility

```
$ Yafuflash -nw -ip <ip> -u <Username> -p <Password> -d 2 <BIOS Firmware Filename>
```


2. BIOS update through BMC webpage

Login BMC webpage

3.1 Select Maintenance

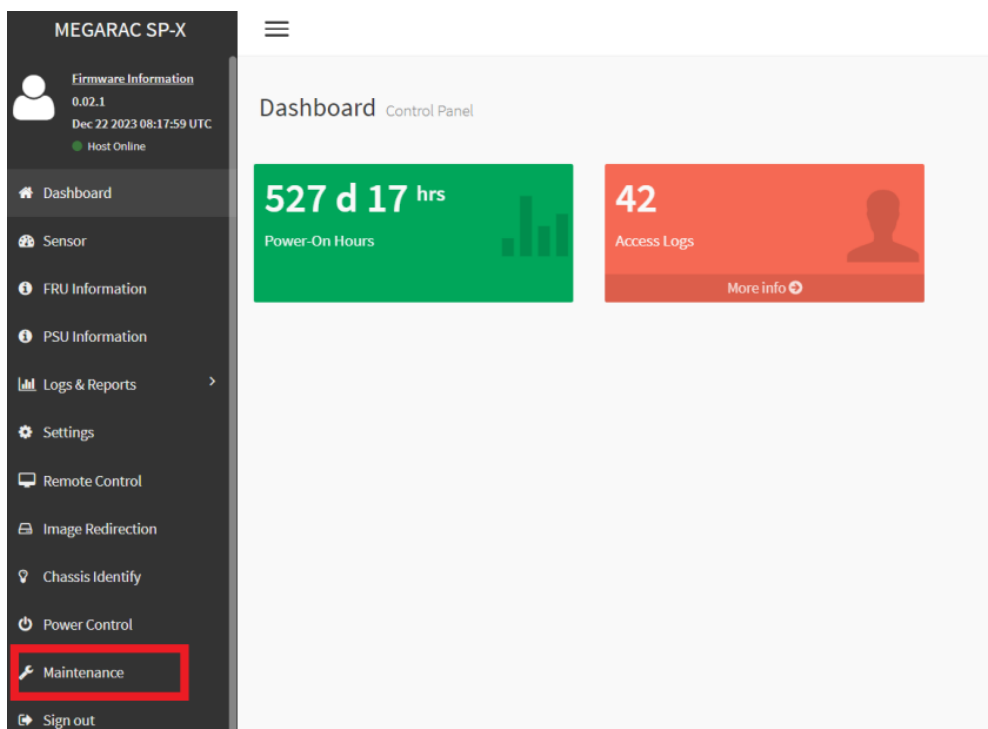

3.2 Select BIOS Firmware Update

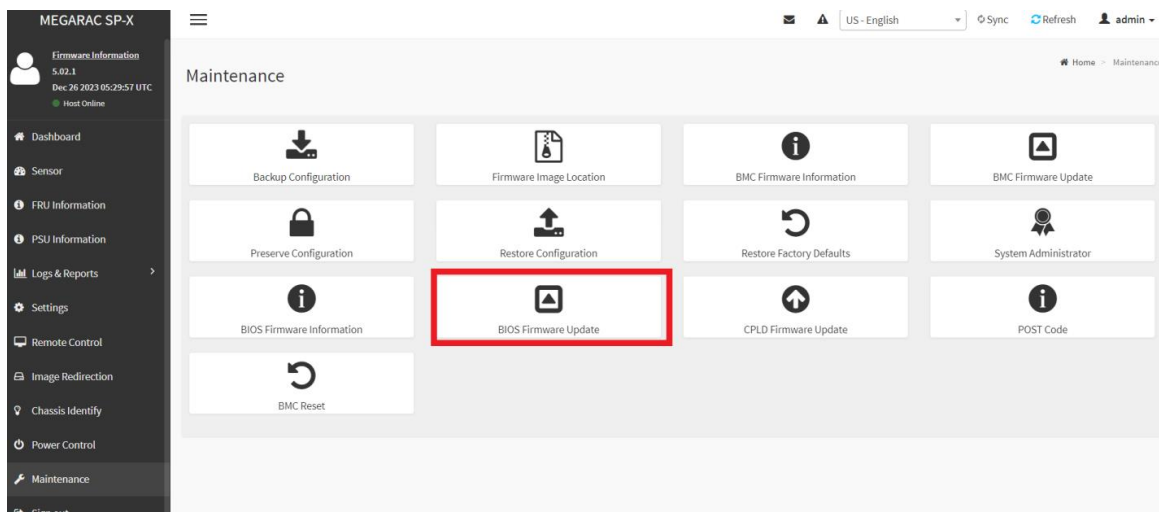

3.3 Choice BIOS image (.bin file) and click start firmware update

BIOS Firmware Update

?

Note:
Following are the Firmware update methods and components supported in this page.

- BIOS Firmware update.

Select Firmware Image

Choose File

Siri0030.bin

Start firmware update

WARNING:Please note that after entering the update mode, the widgets, other web pages and services will not work. All the open widgets will be automatically closed.

3.6 Click Proceed to Flash

BIOS Firmware Update

?

Note:
Following are the Firmware update methods and components supported in this page.

- BIOS Firmware update.

Select Firmware Image

Choose File

Siri0030.bin

Start firmware update

Preparing to flash...

Proceed to Flash

3.7 Press "OK"


192.168.22.72 says

Are you sure you want to flash?


OK

Cancel

3.8 Processing

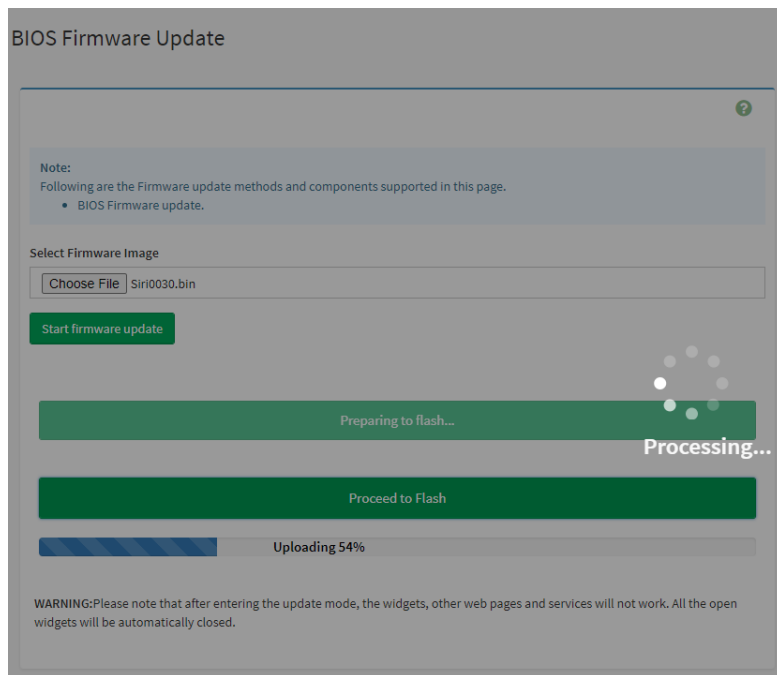

3.9 Press “Proceed to Flash”

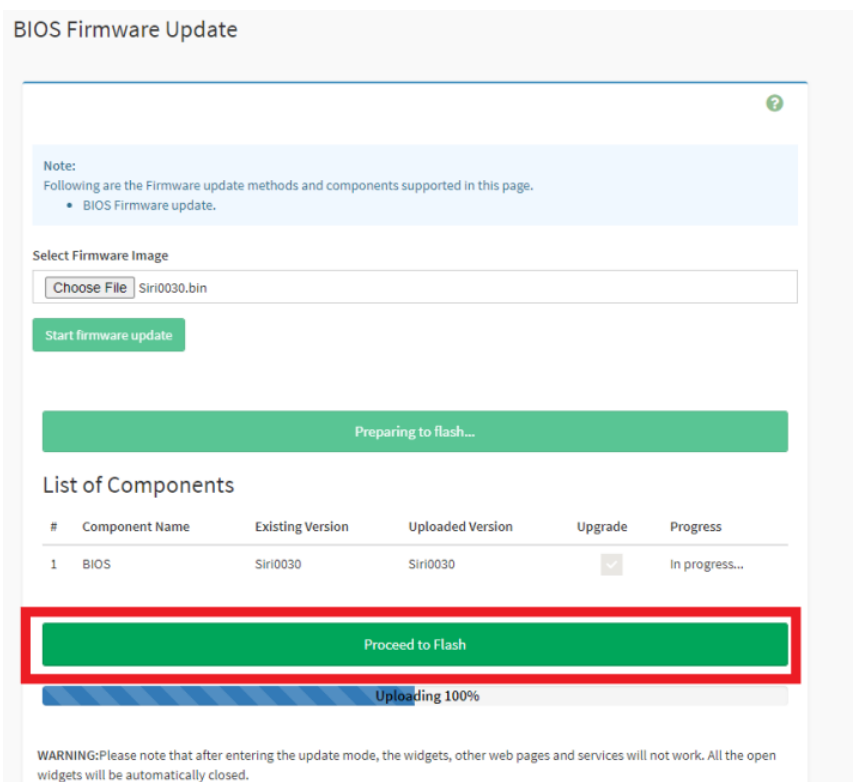

3.10 Update success

